


Sybilla Settee

Australia Item #: 4003

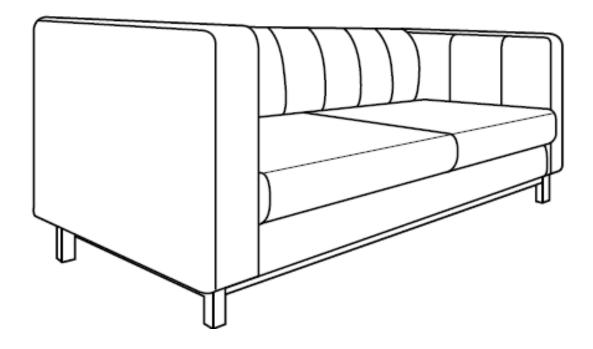

Made in Malaysia for: Incy Interiors Pty Ltd 2a Piper Street, Bathurst, NSW, 2795 AUSTRALIA (02) 9412 3884 www.incyinteriors.com.au Designed and Distributed in Australia by: Incy Interiors Pty Ltd 2a Piper Street, Bathurst, NSW, 2795 AUSTRALIA (02) 9412 3884 www.incyinteriors.com.au

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR SETTEE.

Please keep these instructions for future reference

Health & Safety:

- Do not jump on this Settee
- Do not use this Settee if any part is missing, damaged or worn
- Do not use this Settee until all fixings are tightly secured
- Always use on a level and even surface

Warning: If this settee is on a laminated floor we recommend you place some protection to avoid scratching the floor

Care & Maintenance

- Periodically check all screws & fixings to ensure they are tightly secured.
- It is recommended that 2 people assist whenever you need to change the location of the settee
- Keep any sharp object away from the settee

After Sales Customer Service


When you receive your Incy Interiors product, if you need any assistance or if you have any comments with respect to any aspect of the goods, please contact your local distributor via email.

If you are missing parts you can order parts by emailing us at customerservice@incy.com.au or call (02) 9412 3884. Please include the product name, colour, and a brief description of the part you are missing.

You can also visit our website at **www.incyinteriors.com.au** for latest product information.

Incy Interiors Pty Ltd 2a Piper Street, Bathurst, NSW, 2795 AUSTRALIA (02) 9412 3884 www.incyinteriors.com.au

Parts list

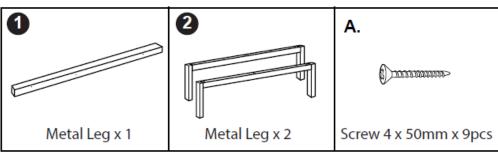

Assembly Instructions

Tools Necessary: Screw driver (not included)

NOTE: It may be easier to assemble product with two people.

- 1. Slot in the wing headboard to headboard as per shown in diagram 3 and 4.
- 2. Remove the Metal Leg (1), (2) and Hardware, from the pocket under the settee
- Place the Metal Leg (1) onto the bottom of the settee at the front, secure using screw 3 x 50mm (A) as shown in fig.1 below.
- 4. Repeat the same step for Metal Leg (2) on each of the sides by using screw 3 x 50mm (A) as shown in fig.2 below.

